Control remoto universal chino RM-9513

Hay tres opciones:

A. Entrar manualmente el código

B. Búsqueda manual del código

C. Búsqueda automática del código

Pasemos a ver cada una de ellas:

A. Entrar manualmente al código:

1. Encender manualmente el televisor en posición normal de televisor y apuntar el control remoto. Luego busque los 3 dígitos del código que corresponde a la marca del televisor y téngalos a mano.
2. Presione y mantenga presionado el botón “setting” primero y luego presione el botón “power”. Suéltelos después que el indicador lumínico se encienda (esto indica que el estatus sin código está listo para ponerse). Si eso no sucede repita este paso 2 hasta que se ilumine el indicador.
3. Entre el primer set de 3 dígitos del código en ese mismo orden y a medida que cada dígito se vaya poniendo el indicador de luz va funcionando hasta que los 3 dígitos se pongan y es cuando el indicador de luz se apaga, lo cual significa que ya se acabó de poner el código.
4. Pruebe otras funciones del mando para ver si ya funciona. De lo contrario repita los pasos 2 y 3 hasta que encuentra un código que sea aceptado por su televisor.

B. Búsqueda manual del código:

1. Encienda manualmente el televisor en posición normal y apunte el control remoto a su televisor.
2. Presione y mantenga presionado el botón “setting” y luego presione el botón “power” hasta que el indicador de luz se ilumine y luego suelte ambos botones a la vez. Así se convierte en estatus de búsqueda manual.
3. Presione ahora la tecla “volumen +” una vez y suéltela cuando vea que el símbolo de volumen aparece en la pantalla del televisor. Si esto no ocurre, repita el procedimiento 3.
4. Después que el símbolo de volumen aparece en la pantalla pruebe otros botones del mando (excepto los botones “setting”, “power” y “volume”). Si las teclas que probó funcionaron entonces presione el botón “setting” inmediatamente y la luz (el indicador de luz) deberá apagarse, lo cual significa que ya se ha concluido la operación. Si las teclas del mando no funcionaron (cuando las probó usted), repita los pasos 2,3 y 4.

C. Búsqueda automática del código:

1. Encienda manualmente el televisor en el estado normal y apunte el control remoto al televisor.
2. Presione y mantenga presionado el botón “set” hasta que el icono del volumen aparezca en la pantalla del televisor. La búsqueda se completará tan pronto como usted suelte el botón “set” inmediatamente.
3. Pruebe otras teclas (excepto los botones “setting”, “power” y “volume”). a ver si funcionan bien. Si todas las que apretó funcionan bien entonces presione el botón “setting” inmediatamente y el indicador de luz se apagará, lo que indica que se ha concluido la operación. Si no, repita los pasos 2 y 3 hasta que encuentre el código adecuado.

Operating Instruction

Universal TV Remote

RM-9513

Thank you for using the remote controller.Ehen it is the first time to put in the batteries .Please try it first,it is could work well with all of its functions,the product can be used directly with out seting it.However,if it could not work well,it should be set witj the following methods before remote controlling your TV.The remote controller would not lose its memory when the power is down so that you could replace the battery without resetting it

Introduction

RM-9513 is a new kind of universal TV remote controller which could meet needs of different levels.It is applied to almost all types of TV sets including old and new types ,types with well-known brands admitted home and abroad ,inferior brand types and so on ,Common functions and menu buttons are all available ,It is comfortable to hold the remote controller due to its lightweight design and it is easy to use Thus it makes RM-9513 an ideal choice to offer your life with more convenience when the original TV remote controller is lost,damagde or needs repalcement

Panel Description

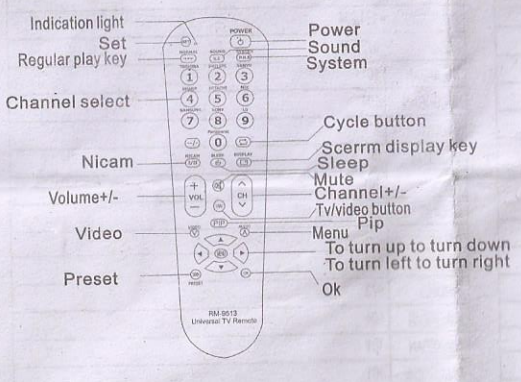

Battery Installatin

In accordance with the "+,-" symbols which is indicated inside the battery cabinet,open the cover and put into two new AAA batteries (nom-rationde). Which is shown in the figue

Battery description

The remote controller is a low-power product.The lifetime of battreies is about 12 months under normal circumstances if it is inpriperly use of operated the life time would be shortende please do nor put old and new batteries or different types of batteries together. In case of barttery leakahe ,the batteries must be removed and the battery cabinet should be cleande before puuting into new batteries. You' d better remove the batteries from the battert cabinet if you intend to stop using the remote controller for a long time.

Settings of Remote Controller:

The remote controller has the oliwing methods of setting please choose ary of them

A:Inputting code:

1.Turn on TV manualy,make it in a normal play state point the remote controller at the TV And then find the corresponding 3-digit cpde of the corresponding brand from the code table

2. Press and hold the "Setting" Dutton at first, then press the "power" button Release both buttons affter the inducator lightilluminates indicating the status offcode in input;in case the indicator light is in other status it indicates thar it' s yet toenter the code inout status, and this steo shall be repeated till the light illumiandtes.



3.Enter the first set of three-digit code in order whenever one digit is inpue,the work lighr would fiash once when all of the 3 digits are input the work lighr would be off which means the stting has been finished if the code is more than one set please use the first one,

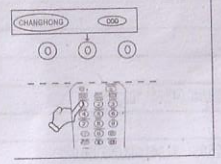

4.Test whether other function buttons could work well,such as the "MUYE" button.

If not rtpeat steps 2-3 untill you you find a suitable set of code

B:Manually search for the code:

1.Manually switch on the tb set,and aim the remote control at the TV set as snown in the figure

2.Press and hold the "setting" button then press the "power" button till then work light is on and then release it it becomes the manually search state



3.Press the "volume+" key onetime and then release it to see whether a volume symbol appears on the TV screen.If no such sumbol occurs repeat the procedure.

4.After the volume symbol is displayde test other function buttons(except the "settings" "power" and "volume" buttons).If they work well.press the "settings" button immdeiatelv and the work light would be off,which meas the setting has been finished

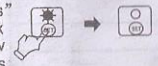

If keying does not work,reset front step2.

C.Automatically searching code:

1.Turn on TV manually,make it in a normal play state.point the remote controller at the TV

2.Press and hold the<SET>buttpn until the volume icon [🔊]appears on the screen, The search is completed as soon sa you relese the<SET>button immediately

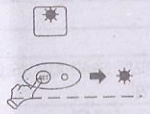

3.Test whether other function buttons (except the "settings" "power" and "volume" buttons)could work well.If they work well press the "settings" button immediately and the work light would be off which means the seting has been finished .If nor,repeat steps3-4until you find the suitable set of code

D.Point to point Brand Searching:

1.Turn on TV manualy,make it ina norma play state.point the remote controller at the TV,Find the sybol of you TV brand such as PHILIPS with its symbo "2"

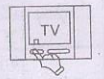

2. Please press and hold(2)until the voume icon [🔊]appears on the screen The search is completd as soon as you release th(2)button immediately



Brand symbol table:

1	2	3	4	5	6	7	8	9	0
Toshiba	philips	SANYO	SHARP	HITACHI	NEC	SAMSUNG	SONY	LG	PANSONI

Warm Tips:

If there are some problem when srtting or using the remote controller try the following methods to solve them

When setting the remote controller please follow the "inputting" code: steps carefuly.If the remote controller could not be used after setting the fitst set of code,please try the other sets 0f code in orde I none of the codes could make the remote controller work well(cr if your home appliances are not on the list) please try automaticall searching code

If you make mistakes when inputting the code you could just re-input the three-digit code ad the work light is on However if the work lightisoff you need to resel by the first step

please wait patiertit when searching the code manually since there are so mant sets of code

Techinlcal Paranrts

Renote controlling Disance About 8 meters (varies by different types)
Battery Type:two pieces of AAA batteries

Alter-sales Service

If the remote controller has problems or could not be used temporailly please comtact our company as soon as possible We should make snorts to affer you with best sevices But do not disassemble or repat it by yourself We would not be espomsible for remotr controllers that have been disassembled without:authonzation

To ensure that you could enjoy good after-sales service .please keep the shoppong bills or receipts when buying the product

Changhong	000,008,009,010,011,014,016,026,028,033,051,052,057,058,067,071,086,087,088,091,092,093,109,159,162,182,183,184,226,288,289,290,291,292,297,300,336,337,338,372,416,452,453,461,462
Konka	011,017,029,032,034,054,067,069,071,075,076,077,078,079,080,081,107,113,117,157,163,164,165,177,210,235,250,251,252,25.,254,255,256,257,301,302,303,321,323,324,345,385,386,392,420,445
Skyworth	011,025,033,045,046,060,070,071,072,073,074,079,083,101,107,108,109,143,160,168,169,170,176,180,181,194,195,196,197,198,199,200,232,234,275,276,277,278,280,281,282,283,284,308,310,311,312,325,326,327,346,347,357,390,391,426,448,460
TCL	051,053,068,071,073,082,083,084,085,110,111,144,156,199,209,216,243,244,245,246,247,248,249,313,314,315,316,317,320,343,344,349,350,382,383,384,427,437,438 451 457 458
Xoceco	011,016,024,025,027,033,053,054,055,056,060,073,079,080,095,098,209,211,217,218,229,230,231,262,295,358,363,369,370,424
Hisense	000,006,007,008,010,014,025,045,046,057,102,103,105,107,115,116,128,129,130,131,138,139,171,172,173,174,185,186,187,188,189,190,191,224,225,233,265,066,269,270,271,273,274,299,304,305,306,307,309,318,319,339,340,341,342,348,418,433,439,440,444
Haier	103,105,112,118,119,175,178,185,186,187,188,201,205,206,218,272,356,380,417,432,434,441,468
GOLD STAR	007,008,011,013,024,025,032,033,039,051,057,065,071,073,079,091,097,102,107,138,225,227,364,367,368
Panda	001,009,011,016,021,022,023,024,025,026,028,033,040,043,051,053,056,057,058,061,062,073,079,089,091,101,124,125,181,203,204,208,263,264,296
Sony	005,041,049,094,106,148,237,238,239,240,405,430,449,467
Panasonic	001,002,014,015,020,021,022, 059,066,422,446,466
Hitachi	000,006,007,008,010,014,015,027,048,179,228,373,401,419,465
SHARP	003,016,018,025,135,136,137,371,425,447
Mitsubishi	011,051
Pioneer	470,471,472
Toshiba	000,007,008,014,015,016,027,028,030,033,053,056,079,089,090,091,159,285,286,287,355,429
PHILIPS	013,023,024,039,040,043,141,241,242,377,378,423,454,455,456
Samsung	008,011,016,021,024,025,033,037,039,040,043,050,051,091,113,123,375,431,376 450
SANYO	000,007,008,014,015,033,035,053,056,079,105,132,133,134,202,223,352,353,354 459
NEC	006,011,016,004,025,033,053,056,024,079
West Lake	011,023,024,033,038,040,043,053,079,098,131,204,219,220,221,222
Daewoo	012,031,042,406
Beijing	008,012,011,019,016,023,024,025,027,028,029,030,031,033,040,043,050,053,056,026,079,091,039,042,051,021,122,126,233,265,298,351,376
GUALUHUA	000,006,007,008,010,016,025,033,045,046,048,053,055,056,073,099,131,204,258
ROWA	011,013,016,023,024,025,040,043,096,127,248,267,268
TOBO/TOS	016,025,033,053,056,077,079,101,103
FORY	007,011,015,023,024,028,033,034,040,043,053,056,060,061,065,079,102
ANHUA	017,001,032,047
BAIHUA	016,025,033,053,056,079
BAIHEHUA	023,024,040,043
BAILE	016,025,012,019,026,027,028,029,030,031,042
BAOSHEN	011,025,016

BAOSHIHUA	033,053,056,079
CAIHONG	011,025,016
CHAIXING	023,024,040,043,073
CHANGCHENG	011,016,017,023,024,025,033,040,043,053,056,001,012,019,027,026,028,029,030,031,042,079
CHENDU	011,025
CHANGFENG	011,053,056,045,046,024,079,033
CHANGFEI	011,016,025,042,123
CHNGHAI	011,025,016,123
CHUNLAN	142,107,131
CHUNFENG	016,025,033,053,056,079,124
CHUNSUN	011,025,016
DONGDA	016,025
DONGHAI	016,025
FEILU	011,016,025
HUANGHE	011,016,023,024,025,040,043,051,103,125,155
HUANGHAIMEI	016,025
HUANGSHAN	011,016,023,024,025,032,033,040,043,053,056,079
HUARI	007,033,053,056,079
HAIYAN	011,023,024,033,040,043,053,056,079
HAIHONG	016,025,026,027,028,029,030,077,103,268
HAILE	032,047
HUANYU	011,015,023,024,033,040,043,053,056,009,057,058,079
HONGMEI	003,011,016,018,023,024,025,033,040,043,056,009,057,058,079
HONGYAN	011,033,053,056,079
JUHUA	011,023,024,033,040,043,053,056,079
JINHAI	009,057,058,099
JINFENG	001,011,021,022
JINTA	016,023,024,025,033,040,043,053,056,009,057,058,079
JINJUAN	011,025,016
Skylark	032,033,053,056,079
KAWA	017,047,001,032,033,101,149,207
KUNLUN	001,011,021,022,033,025,012,042,040,039
KAIGE	011,016,023,024,025,033,040,043,053,056,079
CONIC	027,012,016,019,025,026,028,030,031,033,073,120,204,271
KANGHONG	009,058,057
KANGLI	016,023,024,025,040,043,011,026,027,028,029,042,005
KANGYI	016,025,033,053,056,079,121
Peacock	011,016,023,024,025,033,040,041,043,124
KUAILE	016,025,033,053,056,079
LONGJIANG	011,033,053,056,079
LIHUA	011
Mudan	001,002,011,016,020,021,022,025,032,033,039,040,043,053,056,059,063,065,079,101,107,145,146,149,218,223
MEILE	011,023,024,033,040,043,053,056,009,057,058,079
MENGMEI	023,024,040,043
NANSHENG	011,033,053,056,079
QINGDAO	001,011,021,022,033,053,056,079
Ruyi	011,015,023,024,040,043
SHENCAI	007,016,025,033,053,056,079

SHANCHA	011,033,053,056,079
SHANGHAI	009,011,016,017,022,023,024,025,033,040,043,053,056,057,058,079,123
SHAOFENG	011,015,000,006,007,023
SHENYANG	011,016,025,046,045,033
SAIGE	011,025,016
SONGBAI	016,025
SANYUAN	003,011,016,018,023,024,025,040,043
SANJIAN	033,053,056,079
TAISHAN	011,016,025,042,038,031,030,029,028,027
TIANE	003,011,018
TONGGUANG	033,053,056,079
WEI	016,025
XIANGYU	016,025,032
XUELIAN	023,024,040,043,009,057,058
XINGHAI	016,025,033,053,056,079
SANSUI	008
JIAN SHENG	104
XIANGYANG	033,053,056,079
XINGFU	016,025
XINRISONG	009,057,058,101
YINGGE	016,023,024,025,040,043
YUHANG	016,025
YONGGU	016,023,024,025,040,043
YONGBAO	009,057,058
ZHUHAI	016,025,042
888	033,053,056,079
GANXIN	011,017,023,024,027,040,041,043
HUAFA	007,016,025
HUAQIANG	033,053,056,079,236
JVC	089 161
THTF	463,464
FEIYUE	011,016,023,024,025,040,043
FEILAGN	016,025
Nanpao	016,025,033,053,056,009,057,058,079
FEIYAH	033,053,056,079
NEW STAR	123
NEC	089,140
CAILING	102
Olimpo	104
SVA	158,166,167,365,366
WARUMA1A	031,012,042
Uranas	011,023,024,040,043
Goldstar	009,019,023,024,040,043,098,140
Yuorstar	016,025,009,057,058
Aiwa	009,057,058
HODATECH	032,001,017,047
JIALICAI	016,025,028,033,053,056,079,124,178
Olympia	033,053,056,079
Victory	004
Sher-wood	016,025

AKAI	033,053,056,079
Crown	033,053,056,012,019,025,026,027,028,029,030,031,042,079
Fujitsu	048
Furi	047
Nikon	009,057,058
LG	024,040,098,043,140,259,260,261,421 469
INTEL	213
SUMO	214
DIGTEC	214,150,147
SANKEN	215
POLYTRON	151,152,214,408
KANGHUA	103
Beng	294
SANLING	036,044,
Canca	073,101
DONGJIE	073,097,101
Jin Lipu	038,057
RISHENG	097
KANGWEI	077,101,104
DIGIPOWER	131,204
RIZHI	073,097
HUIJIABAN	101
JINXINBAN	104
MANTIANXING	114
GANGTAI	097
Pascmio	101
QULING	101
SEYE	097
SHENCAI	057,101
RIHONG	073
XINMENGBAN	104
TIANKEBAN	101
TIANGENBAN	101
DONGLING	077
Tianshui Tiangang	428 435,436,442,443
DRTRON	212
Huangtong	016,025
KOLIN	407
PROMAC CINEMAC	409
VISTAR	410
LG	024,040,043,098,140,259,260,261,421 469
SVA	365,366
米	004,019,036,044,057,073,077,097,101,102,103,178,106,047,064,104,114,120,121,122,126,142,147,150,151,152,153,154,155,158,161,166,167,192,193,207,212,213,214,215,236,279,293,294,298,322,328,329,330,331,332,333,334,335,359,360,361,362,374,379,381,387,388,389,393,394,395,396,397,398,399,400,402,403,404,407,408,409,410,411,412,413,414,415,428